


# Negative & Positive Stain (Waste Disposal)

## Before work:

Where to find what and how to set up your Workspace...

1. "Waste Disposal-Kit" (under the fume hood)
2. staining solutions and stock solution at 4°C (the fridge right at the entrance)

**Important:** Only work within the labeled area on the appropriate surface in the designated workspace. If additional space is needed, kindly inform us, and we will prepare an alternative area accordingly

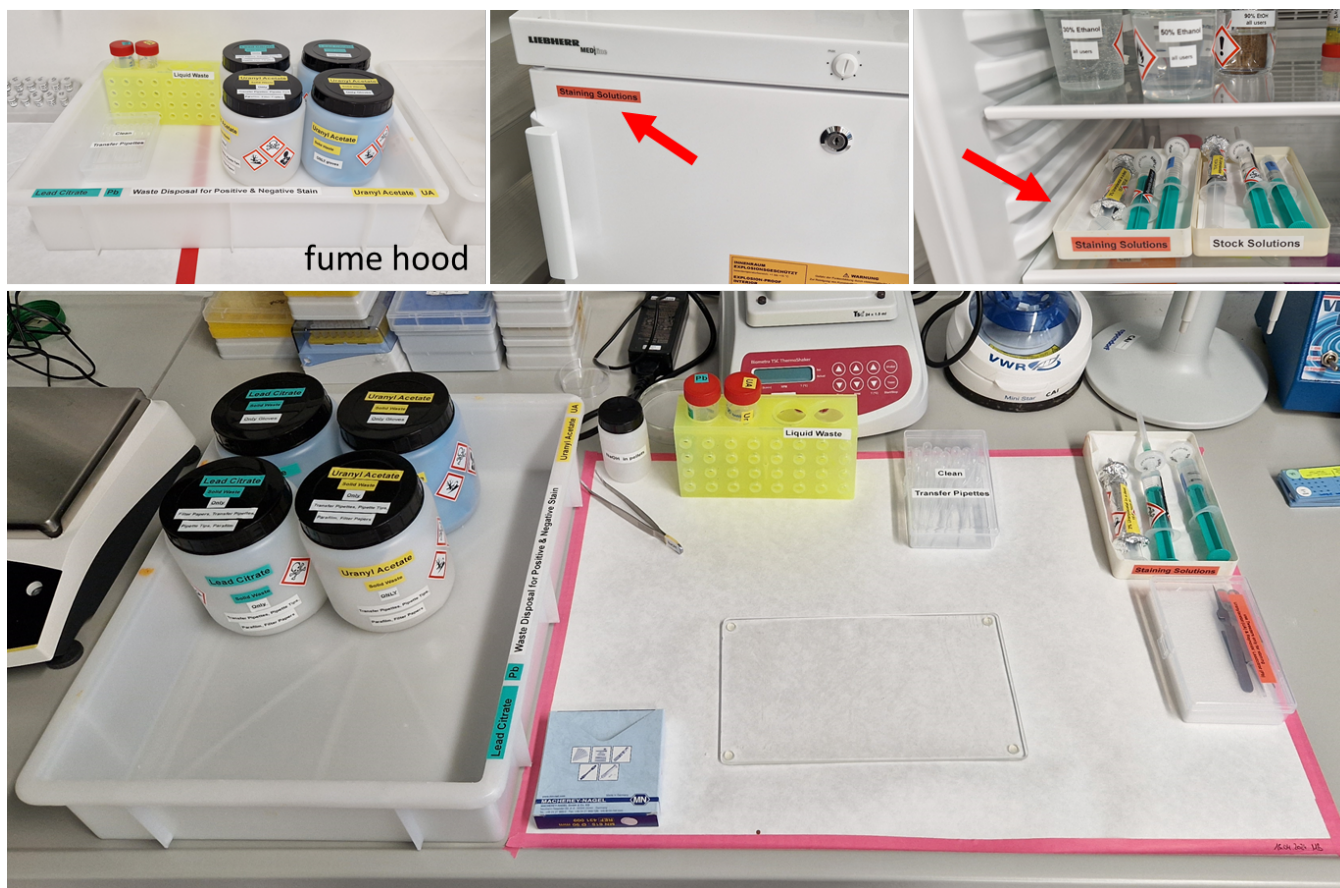


## After work:

The procedure for cleaning up Uranyl Acetate is as follows:

(Lead citrate is cleaned up in the same manner, utilizing the corresponding containers in the waste disposal kit.)

### 1) Uranyl Acetate (UA) disposal

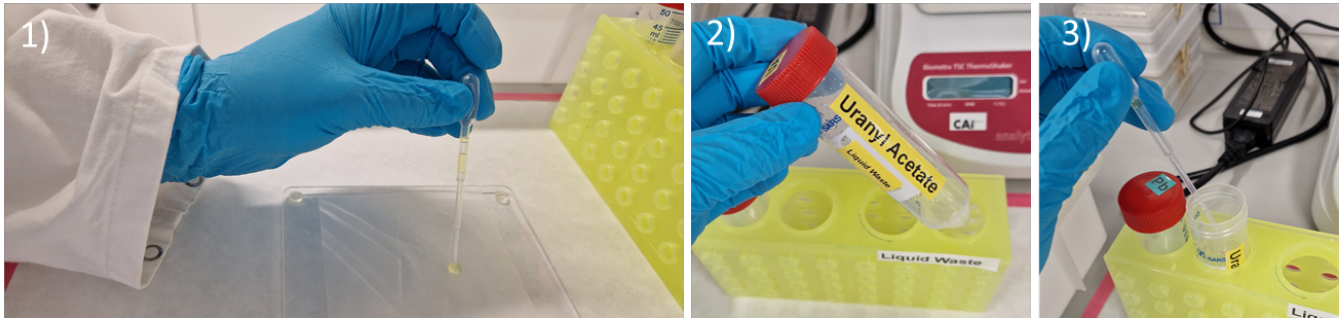

2) UA-Contaminated water droplets:

